

TriCaster® Mini X: Quick Start Guide



What's in the box?



TriCaster® Mini X



Keyboard & Mouse



1 Mini DisplayPort Adapters and 3 Mini DisplayPort to DisplayPort Adapters

×



Removable Power Cable



Power Supply



TriCaster Mini X Connections Set-Up – Front Panel





TriCaster Mini X Connections Set-Up – Back Panel

USB 3 Connectors

- Connect Keyboard & Mouse
- If USB extenders are needed for peripheral devices, performance can vary and it is recommended to contact an authorized Vizrt supplier for advice.

Gigabit Ethernet Network Connectors

 Connect to network for more input sources, for output and internet access.



Power Connector

- Connect the removable power cord to the power supply.
- Connect the power supply cable to the power connector on TriCaster Mini X.
- Plug in the removable power cable into electrical source.

Mini Display Port Connectors

- Connect Mini Display Port to DisplayPort or HDMI adapters.
- Connect adapter cables to HDMI or DisplayPort monitors and displays.

HDMI Source Connectors

 Connect up to four (4) HDMI cameras sources. Each input supports video standard resolutions up to 4Kp30

NX-001998-0001, Rev.01



TriCaster Mini X - Registration

1. Serial Number Label

Find the 15-character serial number label on the TC Mini unit.



2. Internet Connection

Use one of the Gigabit Ethernet Network Connectors on the unit to make an active Internet connection.

3. Display, Keyboard & Mouse

Be sure a display, keyboard and mouse are connected to the unit.

4. Power

Press the Power switch on the unit.

5. End User License Agreement

Once the unit finishes powering up the End User License Agreement screen appears. Click on I Accept the license conditions to continue.



6. User Information

The user info screen now appears. Fill out the information and when complete, click OK.

7. TriCaster® Registration

The Register TriCaster® screen now appears. Type in the 15-character serial number and then click continue.



8. Software Update

After confirmation with the registration service, the system user interface appears. Before using the system, please go to https://www.vizrt.com/support/product-updates/ to download and install the latest version of software.

NX-001998-0001, Rev.01